
Section 12

Driving on a Ramp

1. Stop and shift into first gear, and check the brakes before travelling up or down a ramp.
2. Always use a low gear when travelling down a ramp.
3. Avoid changing gears while travelling on a steep ramp
4. If you have a mechanical or brake failure:
 - a. Immediately apply the brakes.
 - b. If they don't function, apply park brake.
 - c. If the machine does not stop, turn the machine into the rib.

**WARNING**

The machine should not be operated on more than the recommended grades (Section 1).

**NOTICE**

Operators must be competent in Emergency Stop Procedure.



PAGE LEFT BLANK INTENTIONALLY