
Section **13**

Parking on a Ramp



Do not park on a ramp unless absolutely necessary.

WARNING

1. Use the engine braking to help slow down the machine by letting up on the accelerator pedal.
2. Apply the brakes and bring the machine to a halt at the side of the road.
3. Turn the machine toward the rib.
4. If possible remove the load from the forks.
5. Apply the park brake. Observe that the brake head pressure gauge is on zero.
6. Always chock the wheels.
7. Inform mine management of the position of machine.



When on steep grades (more than 1:4). Do not rely on the park brake to hold the machine.

WARNING



Always park with forks into the rib and chock the wheels when on grades of more than 1:4.

WARNING



PAGE LEFT BLANK INTENTIONALLY