

Section 15

Cookie Plate Use

A cookie plate is available to be used with the fork tines on the MH-40. The following outlines the use of the cookie plate.

ATTACHING AND REMOVING THE COOKIE PLATE

To attach the cookie plate:

1. Lift out the retaining pins on either side of the cookie plate.
2. Align the fork tines with the slots in the cookie plate and drive the machine forward until the holes for the retaining pins are aligned between the back plate and the cookie plate.
3. Insert the pins through the cookie plate and into the locating holes in the back plate.

To remove the cookie plate:

1. The method for removing the cookie plate is the opposite sequence to attaching.
2. Ensure the cookie plate retaining pins and the keeper chain are clear before driving the machine away from the cookie plate.

SECURING A LOAD TO THE COOKIE PLATE

All loads for the cookie plate should be within the capacity of the machine and properly secured. There are a series of holes around the circumference of the cookie plate for securing the load. The load should be secured using suitably rated chains.




WARNING

Always check that the cookie plate retaining pins are secure and properly installed before using the machine. Failure to confirm that the pins are installed may result in the cookie plate sliding off the fork tines for use.



NOTICE

All site transport rules should be observed when securing and transporting equipment with this machine.

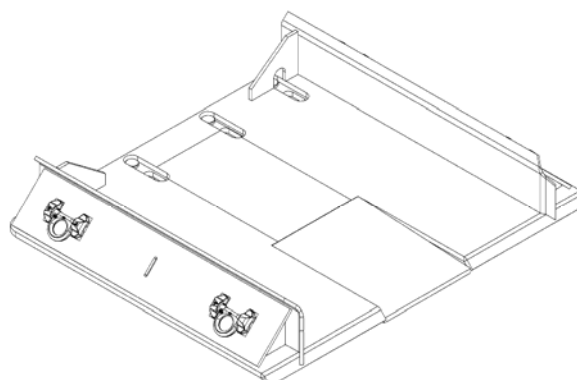

There are various options available



PAGE LEFT BLANK INTENTIONALLY