

Section **19** Air Venting the Engine Cooling System

To prevent an air lock in the engine coolant system, the cooling system automatically bleeds back to the expansion tank. Fill the coolant system expansion tank only with the correct mix of *potable* water and inhibitor as required in Section 21 - Fluid Specification Table.


NOTICE

Add water conditioner as necessary.


NOTICE

Refer to Section 5 for isolation of the cooling system and Section 6 for checking and filling of the cooling system.

PAGE LEFT BLANK INTENTIONALLY