

TABLE OF CONTENTS

Section 1	General Information	
	Introduction	1
	Description.....	1
	General Arrangement	2
	Specifications.....	3
Section 2	General Safety and Precautions.....	5
Section 3	Gauge Parameters and Colour Coding.....	9
Section 4	Machine Orientation, Controls and Functions	
	Machine Orientation	
	Basic Machine Layout	11
	Control Locations	
	Compartment Door	12
	Transmission Gear Control Lever.....	13
	Transmission Directional Control Lever.....	13
	Park Brake Button	14
	Four-Way Joystick Control Lever	15
	No 1—Two-Way Hydraulic Control Lever.....	15
	No 2—Two-Way Hydraulic Control Lever.....	15
	Operator' Seat	16
	Accelerator Pedal	16
	Brake Pedal	16
	Steering Wheel	17
	Brake Head Pressure Gauge	18
	Brake Accumulator Pressure Gauge	18
	Steering Accumulator Pressure Gauge	18
	Engine Start Button	19
	Air Pressure Gauge	19
	On/Off Toggle Switch	19
	Transmission Oil Temperature Gauge	20
	Engine Coolant Temperature Gauge.....	20
	Horn Button	21
	Emergency Fuel Shut Off Valve	21
	Engine Service Hour Meter	22
	Air Cleaner Service Indicator.....	22
	Exhaust Outlet Gas Temperature Gauge	23
	Engine Oil Pressure Gauge.....	23
	Shutdown System Test Valve.....	23
	Engine Fuel Primer Pump	24
	Attachment Quick Connects Button.....	24
	Emergency Intake Shut Off Valve	25
Section 5	Machine Isolation	
	Engine Isolation	27
	Pneumatic Isolation	28
	Hydraulic Isolation	29
	Engine Coolant Isolation.....	30
	Electrical Isolation.....	31

Section 5	Machine Isolation (cont.)	
	Articulation Isolation	32
	Lift Arm Isolation.....	33
	Exhaust Conditioner Isolation.....	34
Section 6	Pre-Start Procedure.....	35
Section 7	Engine Starting Procedure	45
Section 8	Post Start Checks.....	47
Section 9	Stopping the Engine.....	49
Section 10	Tramming the Machine	51
Section 11	Stopping and Braking	53
Section 12	Driving on a Ramp.....	55
Section 13	Parking on a Ramp	57
Section 14	Loading.....	59
Section 15	Cookie Plate Use	61
Section 16	Towing the Machine when Disabled	63
Section 17	Towing with the Machine	65
Section 18	Air Venting the Fuel System.....	67
Section 19	Air Venting the Engine Cooling System.....	69
Section 20	Diesel Control System (DCS)	71
Section 21	Fluid Specification Table	73

This document is the property of Bucyrus. SUBJECT MATTER HEREIN IS PRIVATE, CONFIDENTIAL AND RESTRICTED. Do not use, reproduce, copy, distribute or disclose except with, and only to the extent of, prior written consent of Bucyrus. PERSONS RECEIVING THIS DOCUMENT ARE RESPONSIBLE FOR RESTRICTING DISCLOSURE, except as absolutely necessary consistent with the intended use. When such is completed, return immediately to Bucyrus.

Bucyrus recommends that all Safe Working procedures should be approved and checked by Mine Officials. Bucyrus declines all liability for direct or indirect consequences of printing errors.

This document is copyright. All intellectual property rights and copyright in the document (or any part of this document) remains the property of Bucyrus. Except as provided for in the Copyright Act 1968 (Ctn) no part of this document may in any form or by any means (including without limitation electronic, mechanical, micro copying, photocopying, recording or otherwise) be reproduced, stored in a retrieval system or transmitted without the prior written permission of Bucyrus.

BUCYRUS Australia
Room & Pillar Division
20 Kullara Close, PO Box 373
Beresfield NSW 2322 Australia
Phone: +61 2 49147000
Fax: +61 2 49147059